





**THULE**
SWEDEN

Thule XT Kit 3034

> Instructions

VOLKSWAGEN California (T5), 4-dr Bus, 03-09, 10-
VOLKSWAGEN Caravelle (T5), 4-dr Bus, 03-09, 10-
VOLKSWAGEN Multivan (T5), 4-dr Bus, 03-09, 10-
VOLKSWAGEN Shuttle (T5), 4-dr Bus, 03-09, 10-
VOLKSWAGEN Transporter (T5), 2-dr Single Cab, 03-09, 10-
VOLKSWAGEN Transporter (T5), 4-dr Double Cab, 03-09, 10-
VOLKSWAGEN Transporter (T5), 4-dr Van, 03-09, 10-

This Kit is only for vehicles with fixpoint mounting or T-profile.




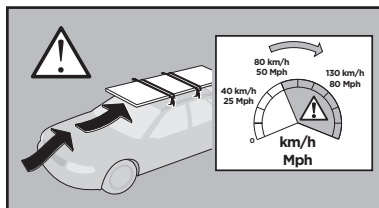
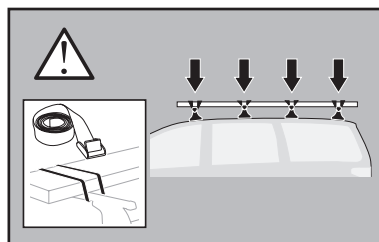
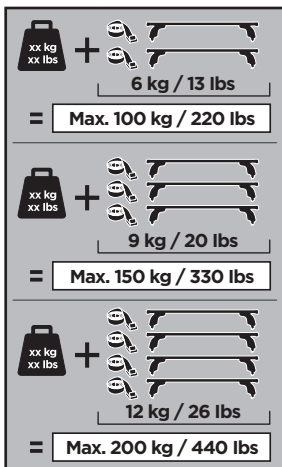
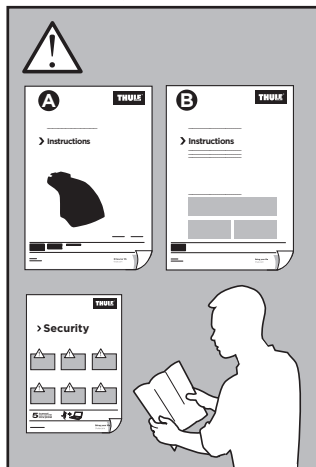


ISO 11154-E





183034

C.20130617
509-3034-03


Bring your life
thule.com

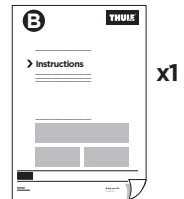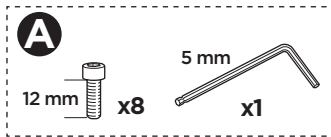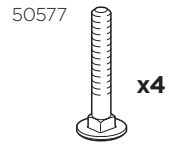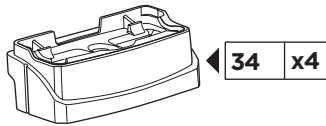



1

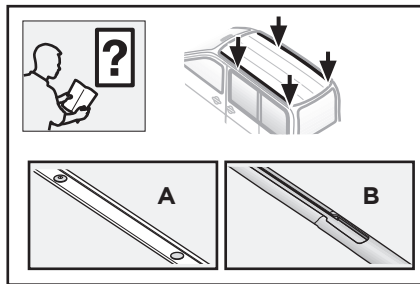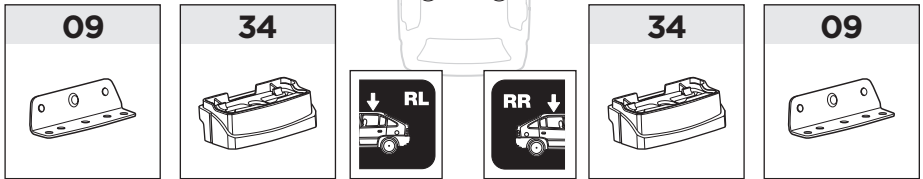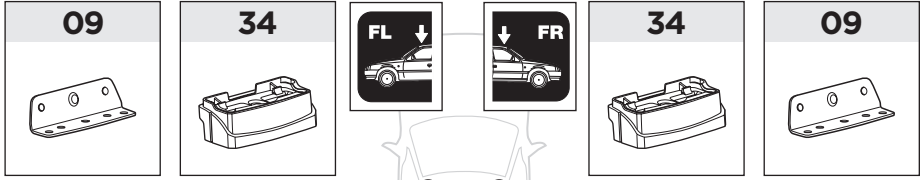


2 A

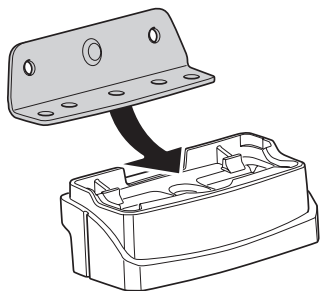


B

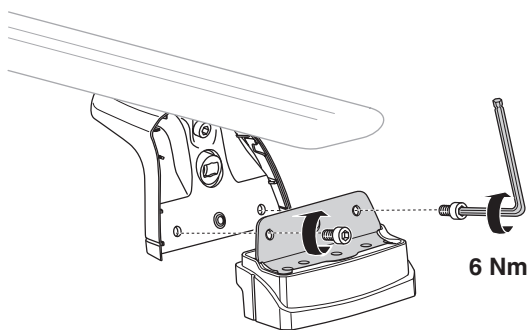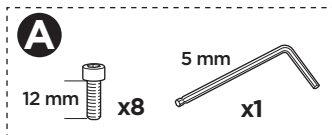


3








x1

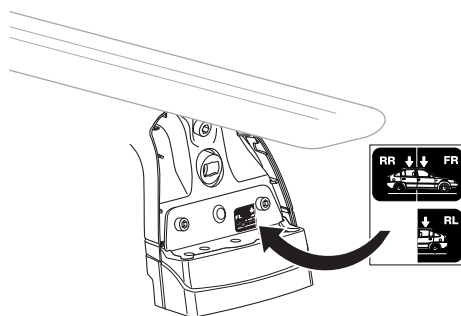


4




A

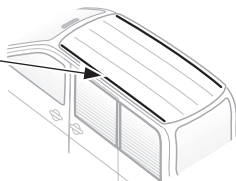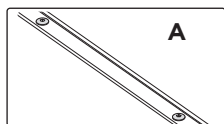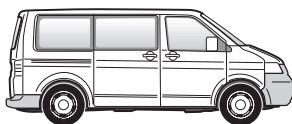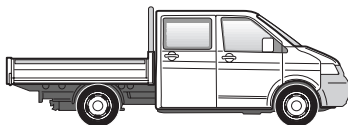


A

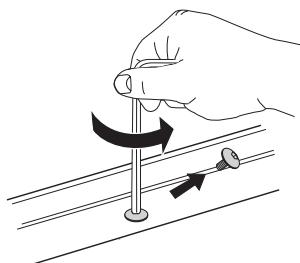


B

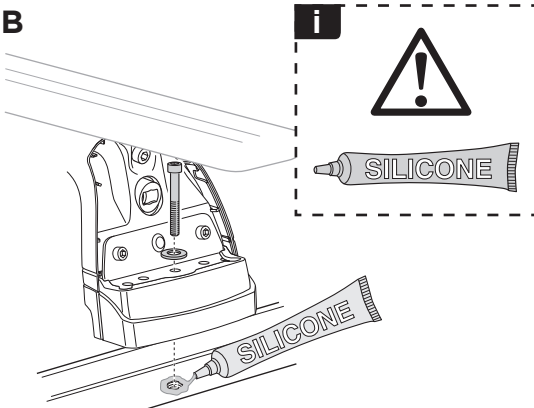


C

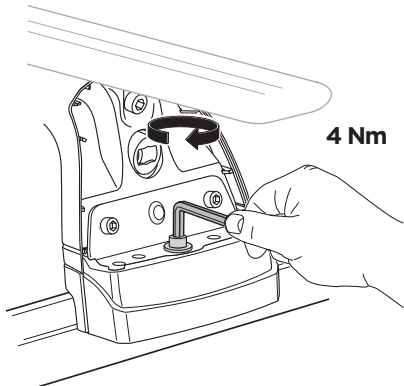

D

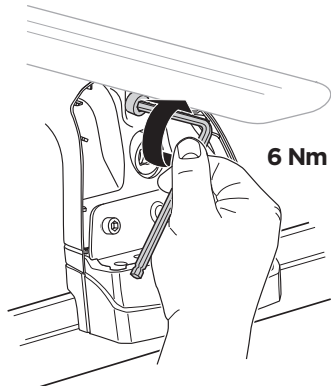



4





A

5 mm


x1

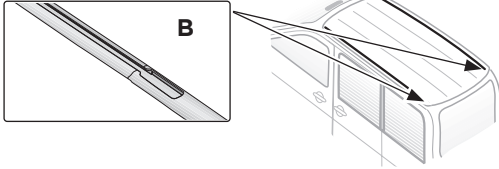


A

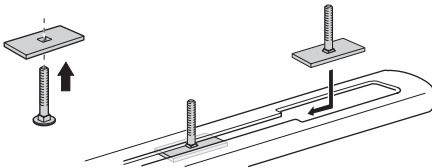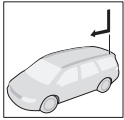

B

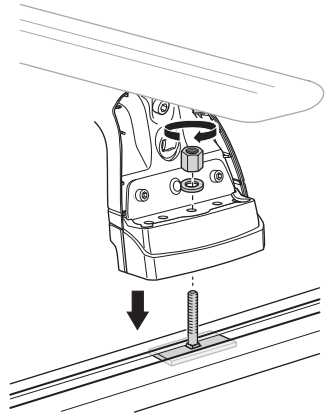


C

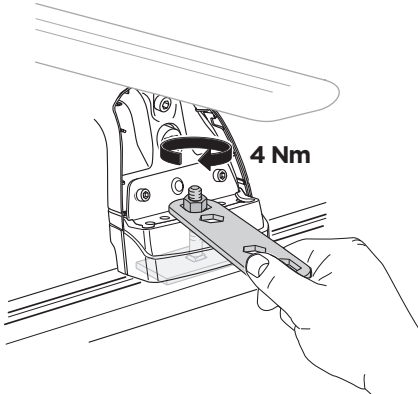

4 Nm

D

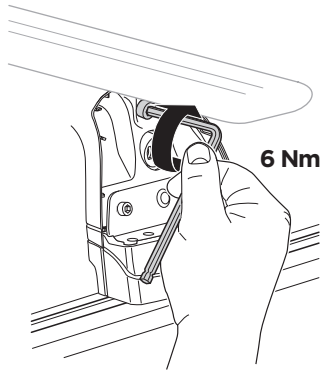

6 Nm

